

E-240 GBS • E-340 GBS • E-440 GBS • E-640 GBS S-240 GBS · S-340 GBS · S-440 GBS · S-640 GBS



ASSEMBLY GUIDE



Enhance your assembly experience.

Download the free $BILT^{m}$ app for 3D step-by-step instructions.









Descarga gratis la app BILT™ y sigue las instrucciones 3D paso a paso. Téléchargez gratuitement l'application BILT™ pour obtenir les instructions étape par étape en 3D.


59551

020118 enGB





- ▲ Assemble grill on a flat, level, and soft surface.
- ⚠ Remove protective film from stainless steel parts before installing.
- ▲ Do not use power tools for assembly.
- ▲ 2 people required for assembly.
- ⚠ There may be visual differences between illustrations and model purchased.
- ▲ All packing material is recyclable.

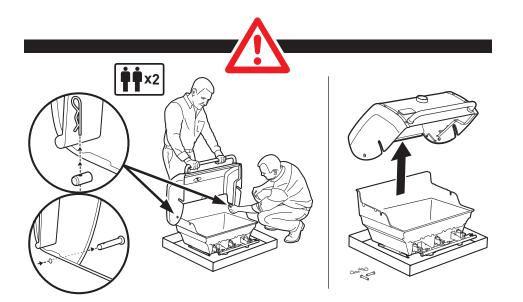


MODELS ONLY:


O O 240


O O O 440


O O O O O O O


TOOLS REQUIRED:

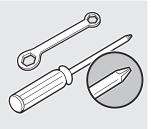


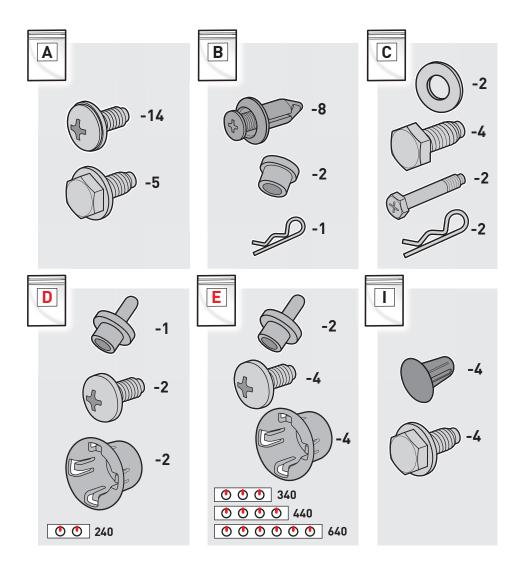


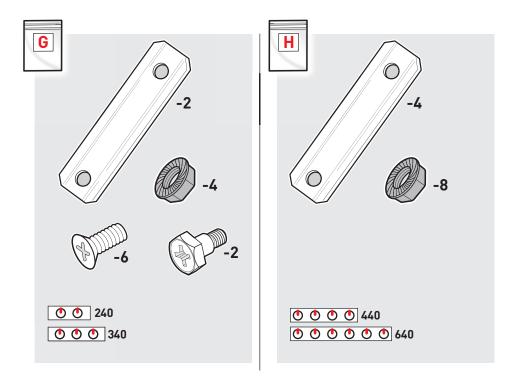


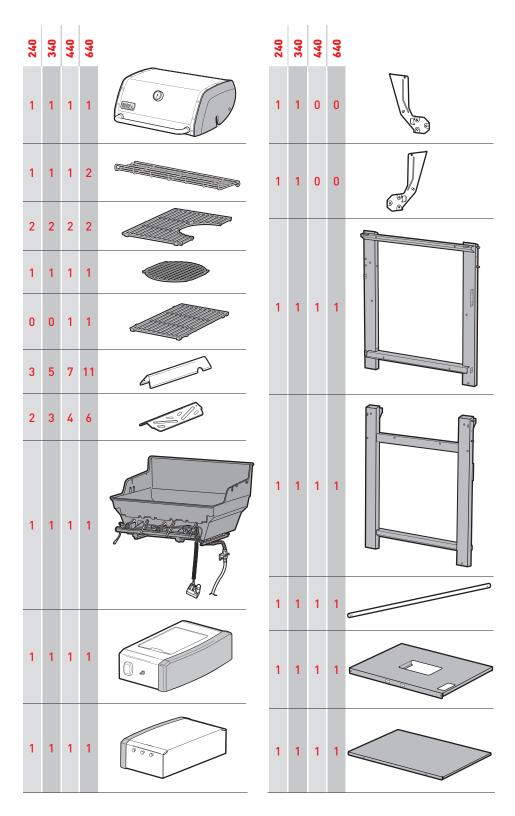


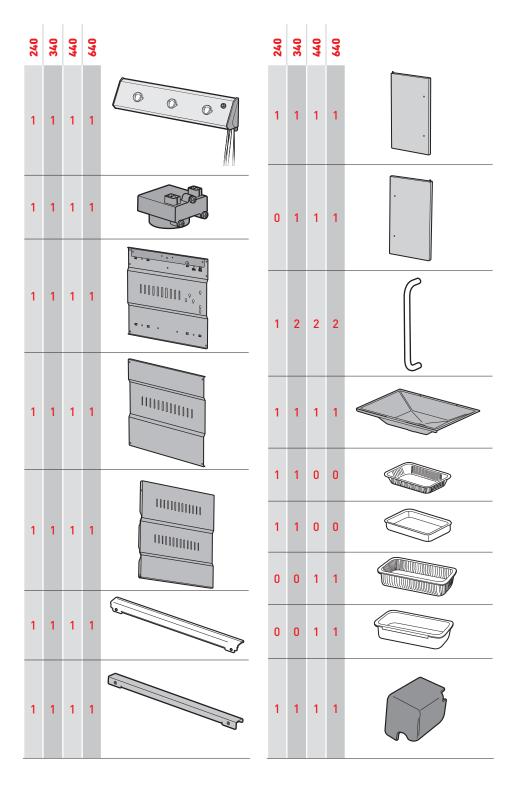

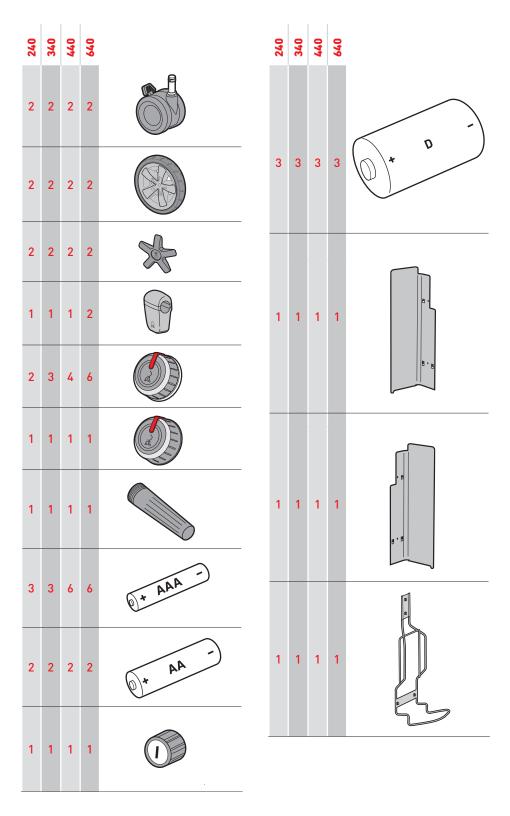


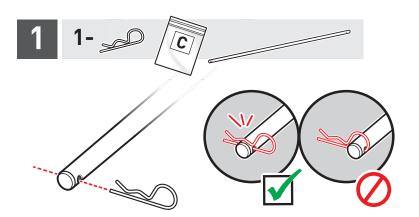

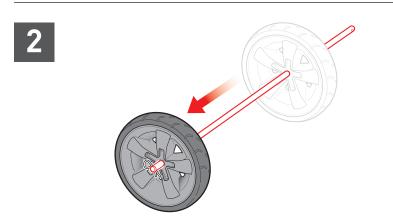

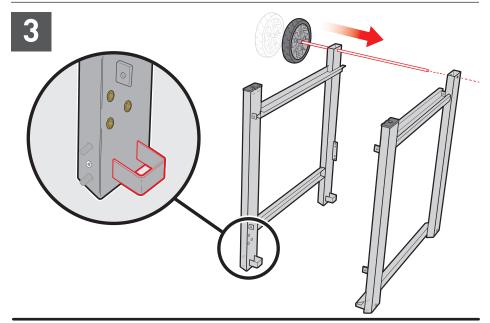




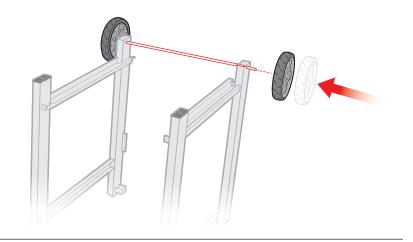









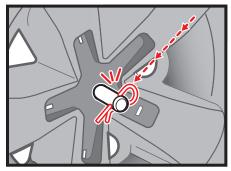


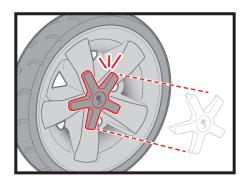



6




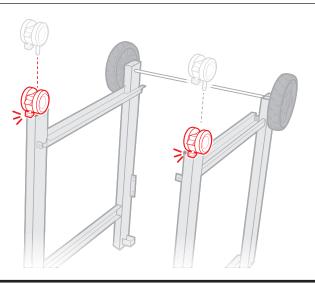


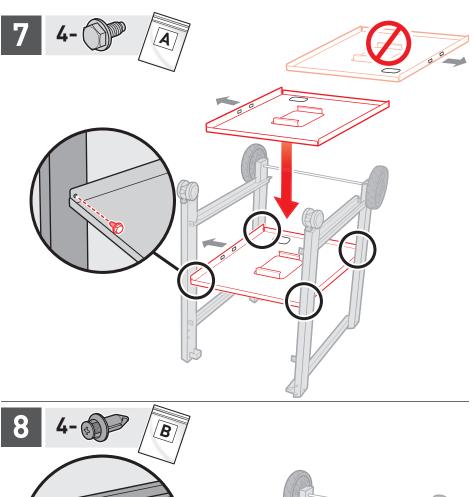


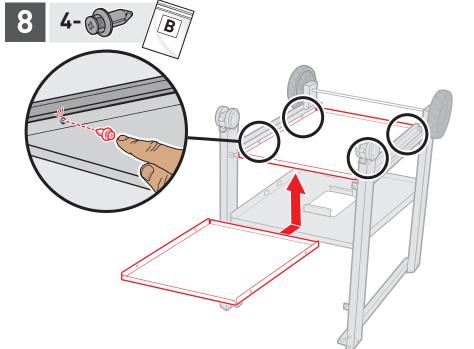


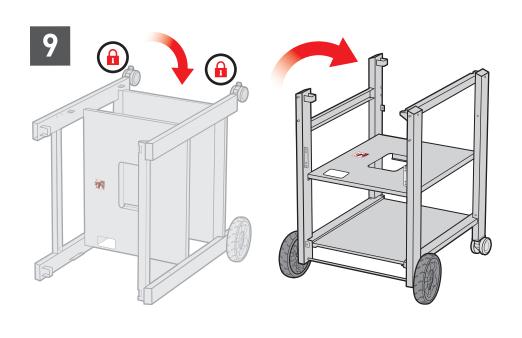

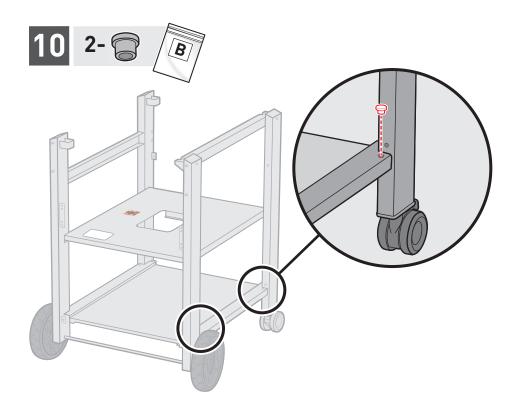

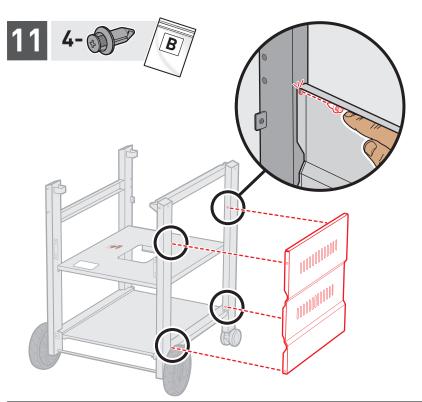


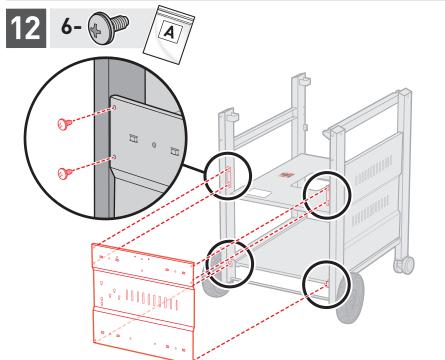

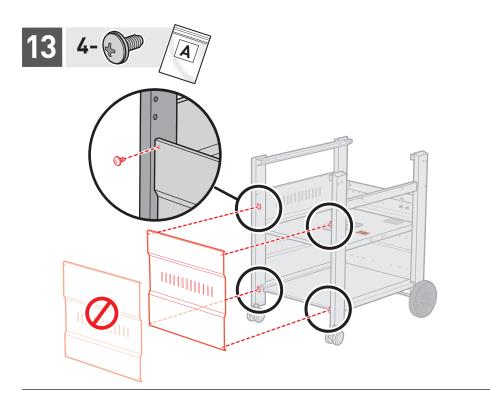



1₄ [△] IMPORTANT!


⚠ Wires must be routed on the <u>INSIDE</u> of the grill frame.

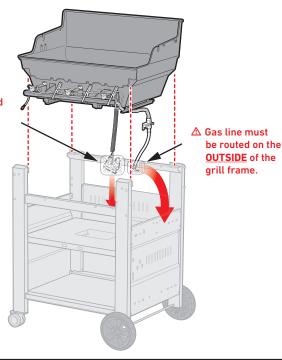



 \triangle Route wires to the outside of the corrugated gas line.

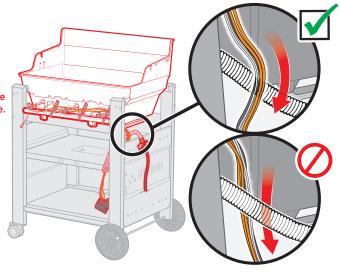


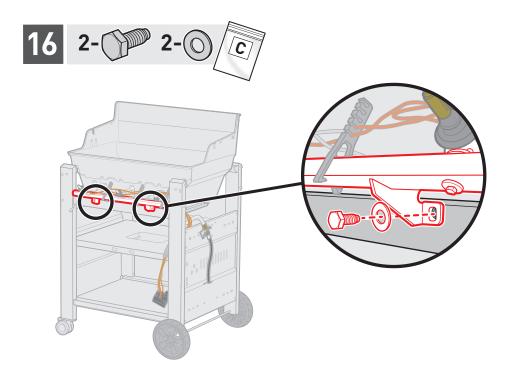


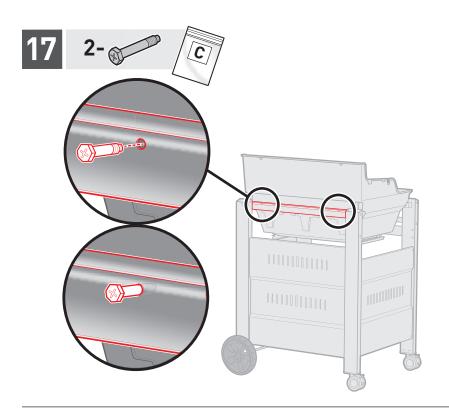


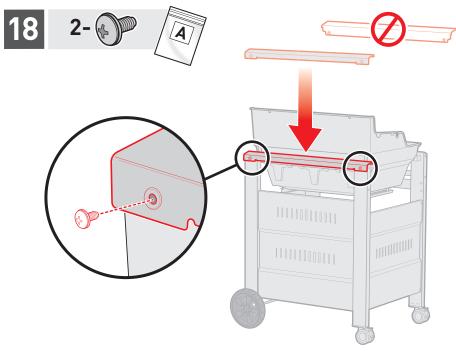


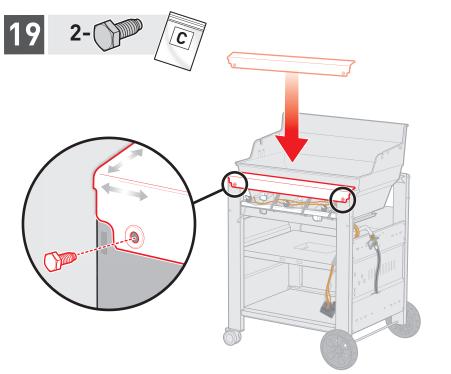


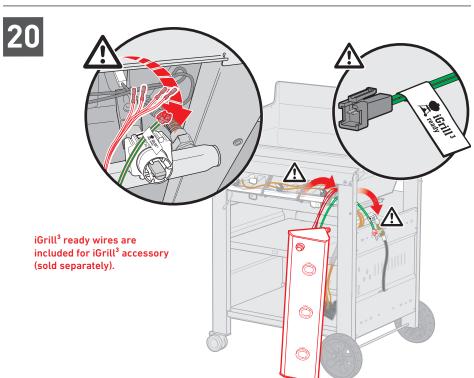


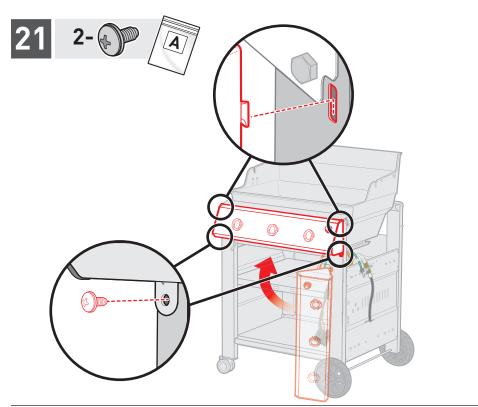


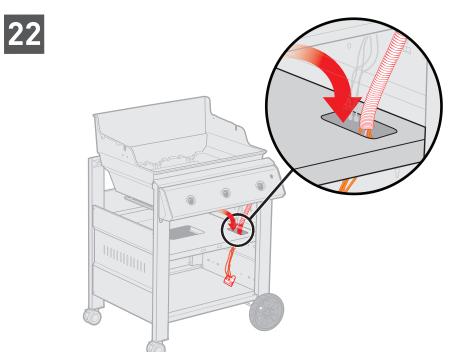


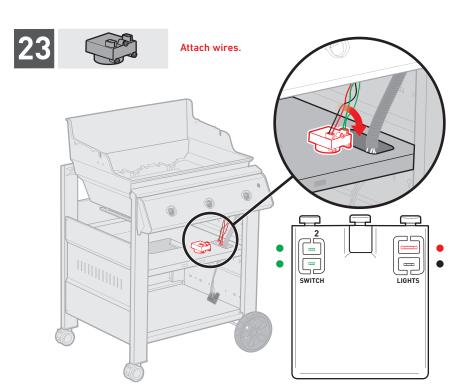


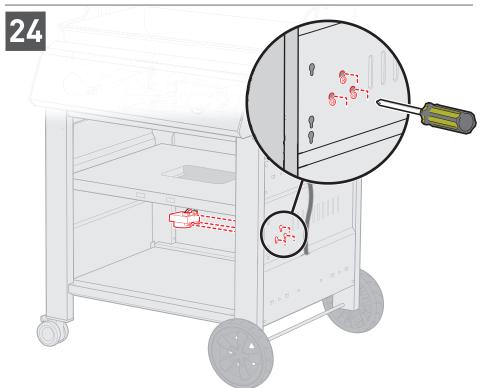


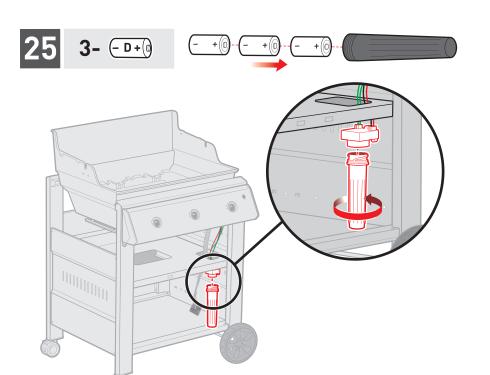

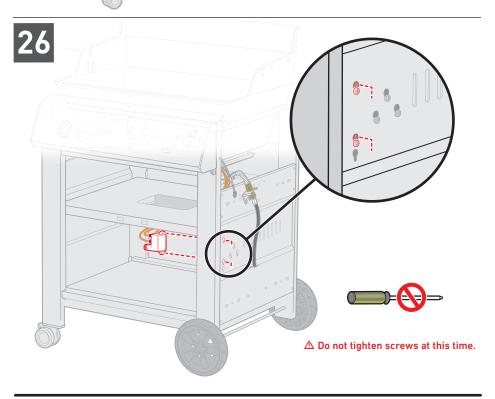


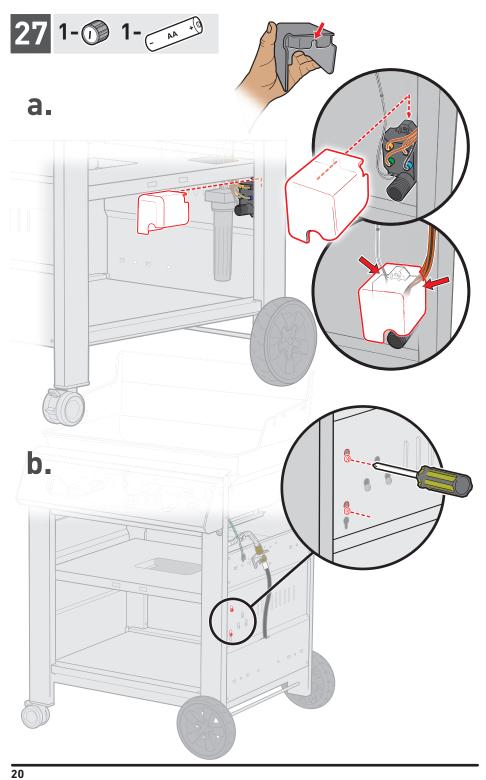


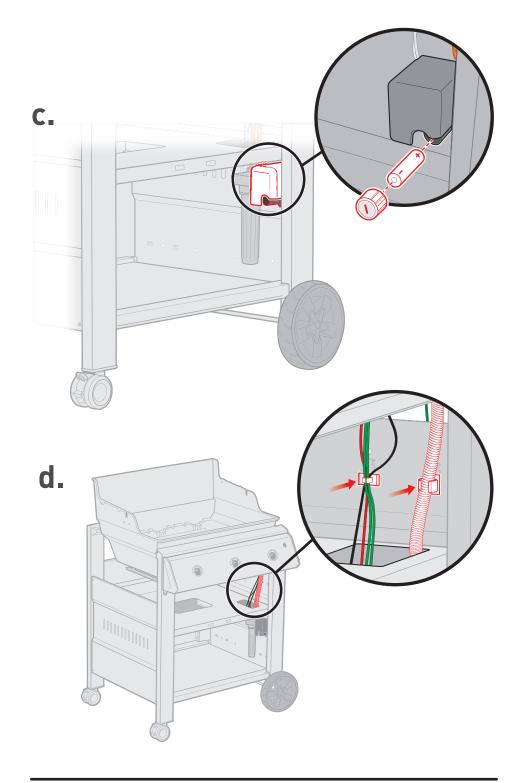


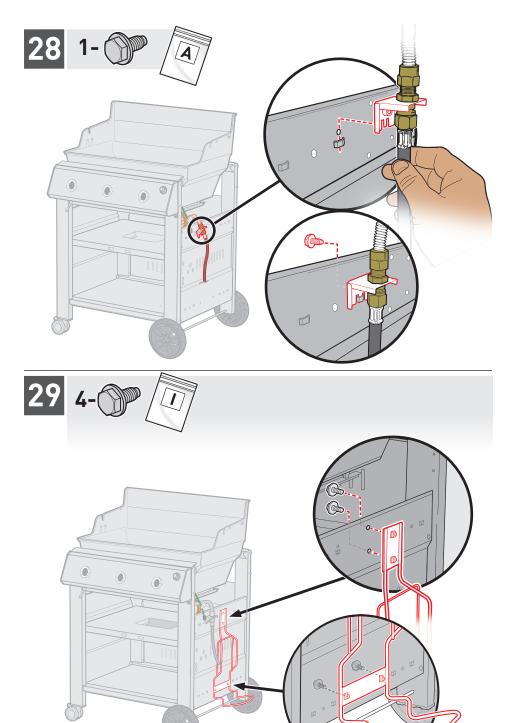


30 2- 2-

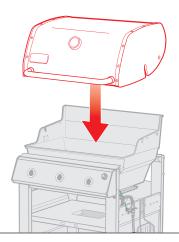


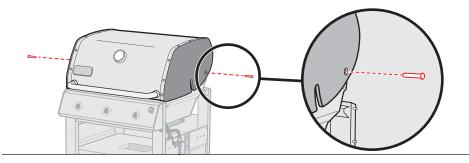


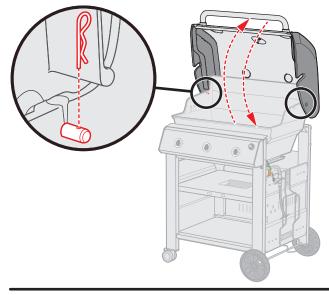



▲ WARNING: Always keep lid closed when assembling or moving your grill.

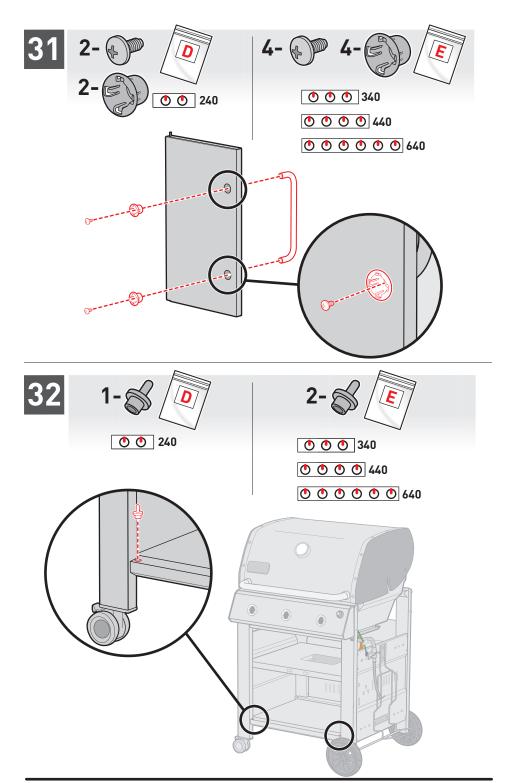


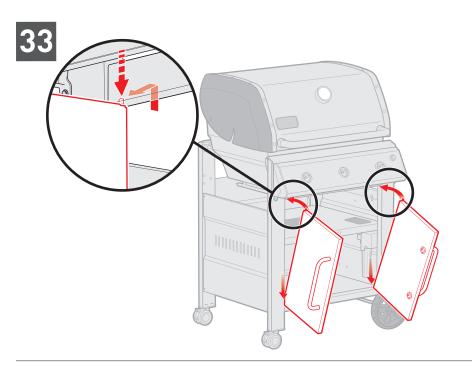


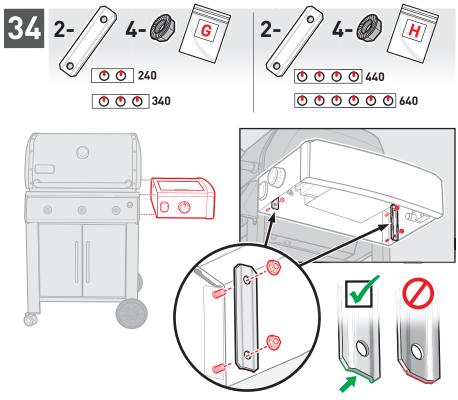


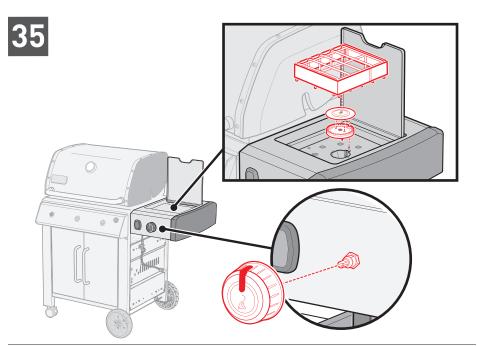


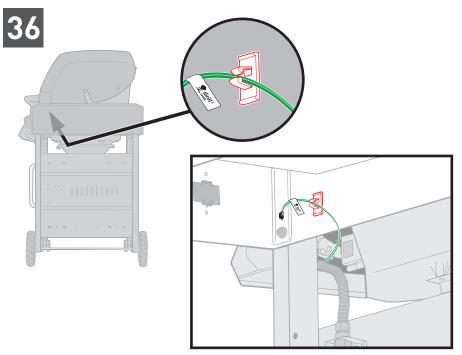


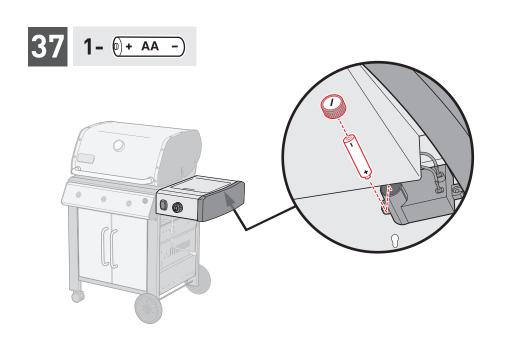

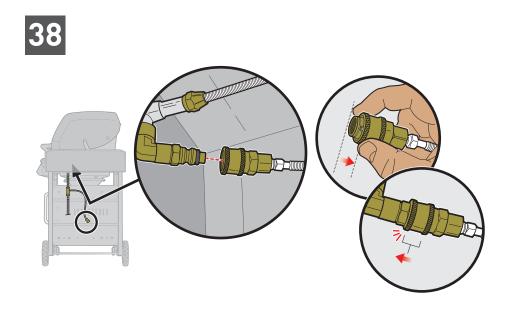

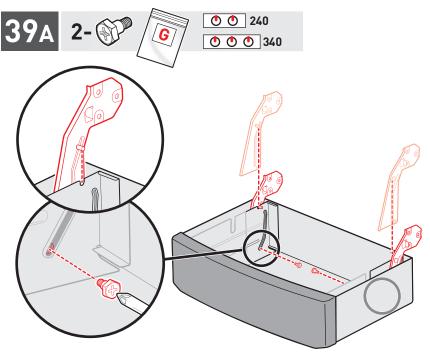

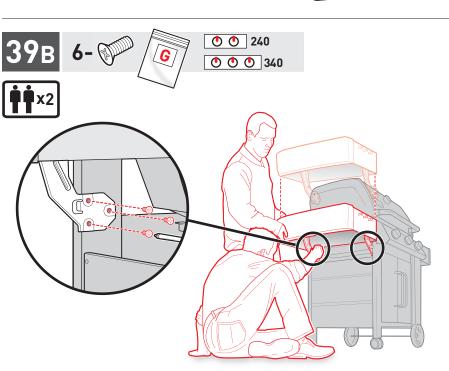

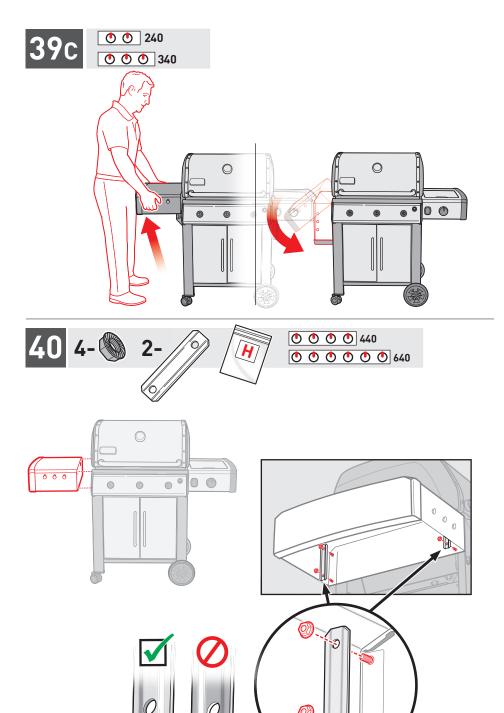









a.

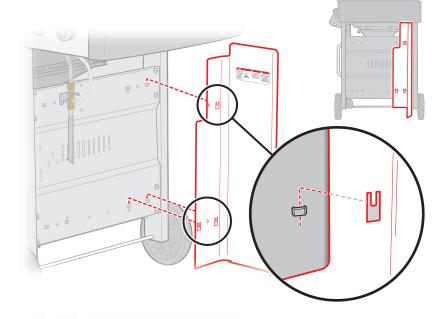

b.

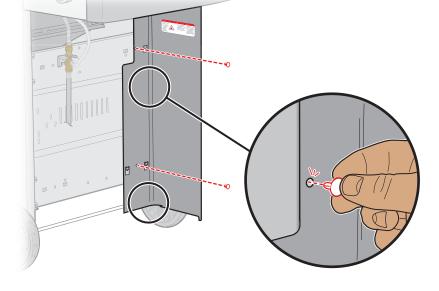













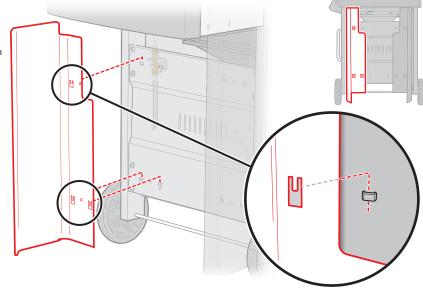


b.

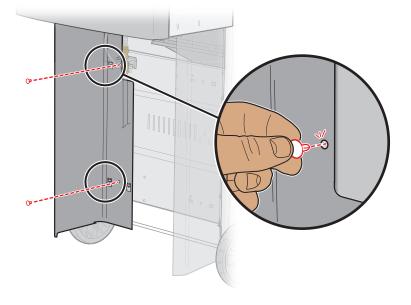


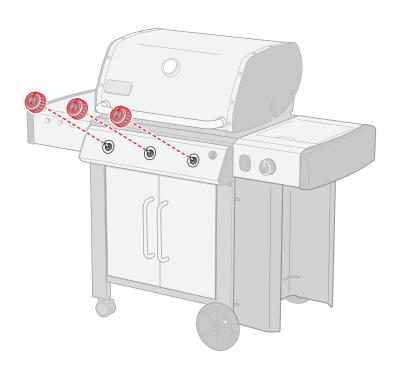


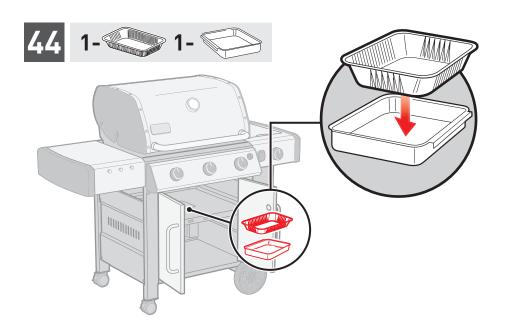


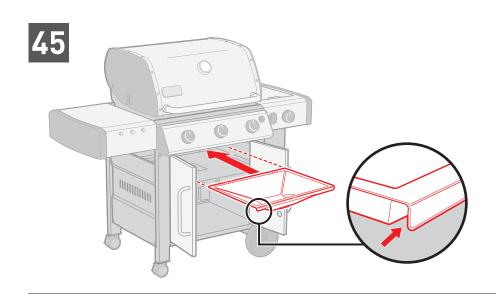



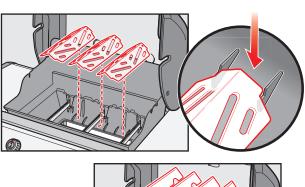

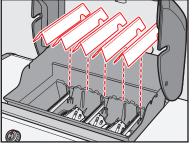

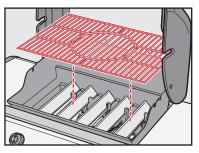


47


3- 0) + AAA -


① ① 240 ① ① ① 340 ① ① ① ① 440


6- 0 + AAA -

O O O O O 640

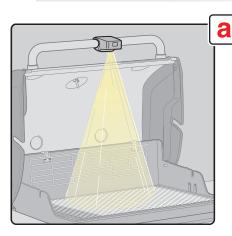


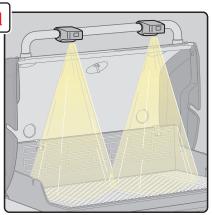


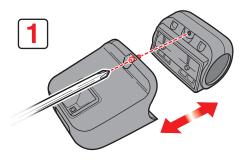

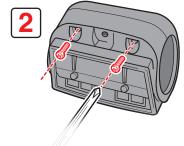




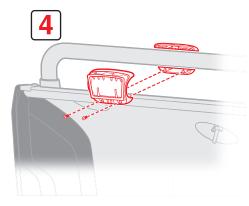


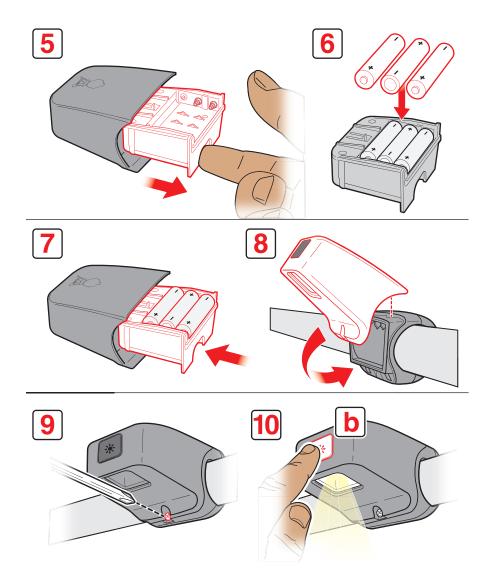

Before use, the grill light should be positioned as shown in illustration (a). Press the AWAKE button to activate the grill light. The light has a 'tilt sensor' that will turn on the light if the grill lid is opened and turn off the light when the grill lid is closed. If the lid is left open or closed for more than 30 minutes, the grill light will deactivate. To turn the light back on, press the AWAKE button (b).

NOTE: The light does not turn OFF by pressing the AWAKE button.

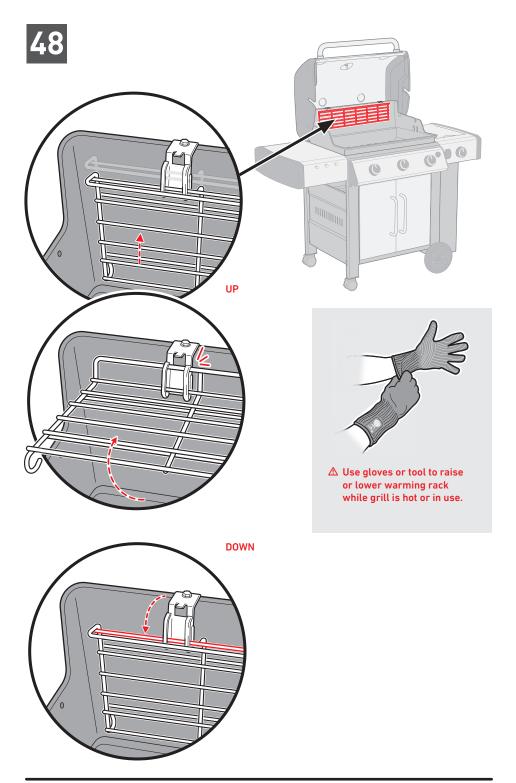

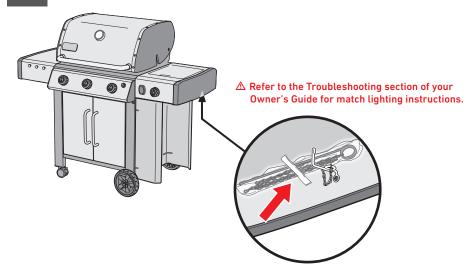

Register Today.









Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Android and Google Play are trademarks of Google Inc.