


# GENESIS II

## LX

E-240™ GBS™ • E-340™ GBS™ • E-440™ GBS™ • E-640™ GBS™  
S-240™ GBS™ • S-340™ GBS™ • S-440™ GBS™ • S-640™ GBS™

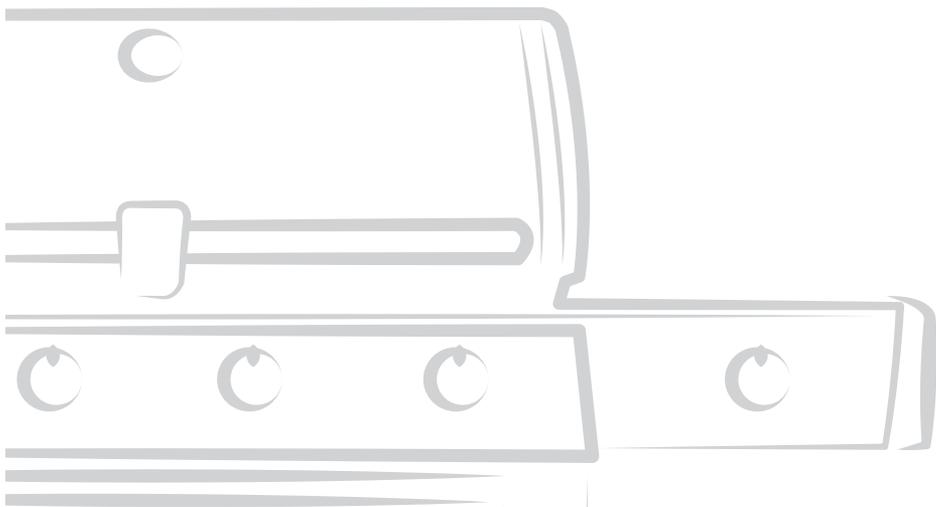

# ASSEMBLY GUIDE

Before you begin



Enhance your assembly experience.

Download the free BILT™ app for  
3D step-by-step instructions.





74382



122716  
enGB - LPG





FOR LIFE!

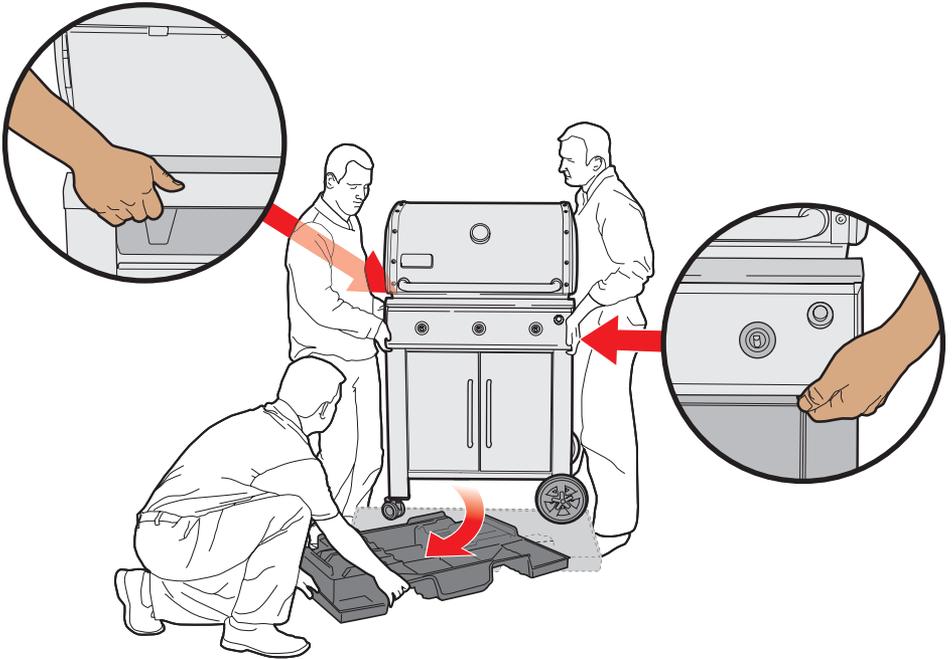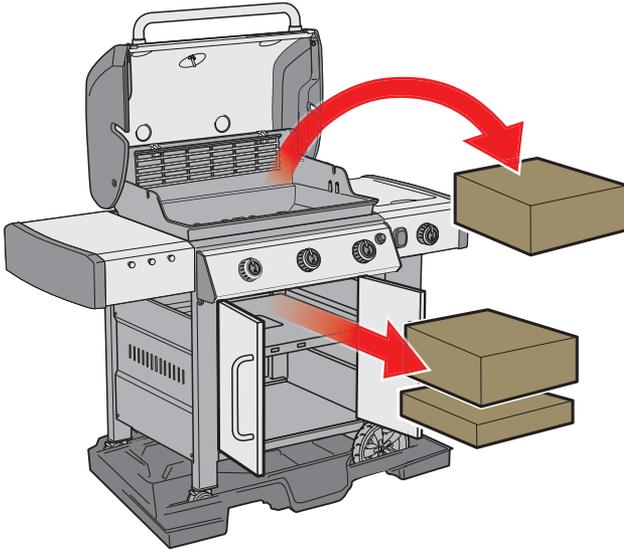






- ⚠ 3 people required for unpacking.**
- ⚠ Remove all content from under the grill lid and inside of the cabinet before lifting the grill off of the plastic base.**
- ⚠ Assemble grill on a flat, level, and soft surface.**
- ⚠ Remove protective film from stainless steel parts before installing.**
- ⚠ Do not use power tools for assembly.**
- ⚠ There may be visual differences between illustrations and model purchased.**



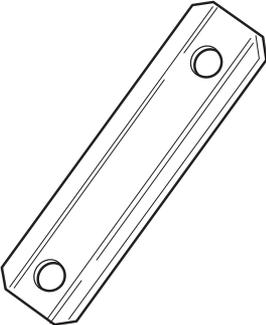
 
240	340	440	640	
2	2	4	4	
4	4	8	8	
4	4	0	0	
2	2	0	0	
4	4	4	4	
4	4	4	4	

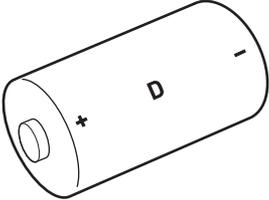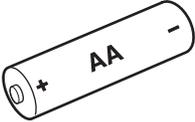240	340	440	640	
3	3	3	3	
2	2	2	2	
3	3	3	6	




**TOOLS REQUIRED:**

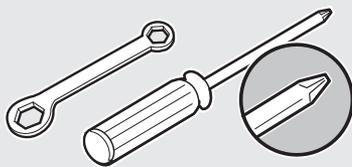

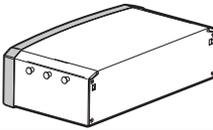
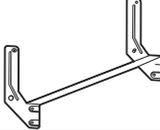
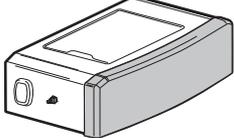
 
240	340	440	640	
1	1	1	1	
2	2	2	2	
1	1	1	1	
0	0	1	1	
3	5	7	11	
2	3	4	6	
1	1	1	1	
1	1	0	0	
1	1	1	1	
1	1	1	1	
1	1	0	0	
1	1	0	0	
0	0	1	1	
0	0	1	1	

  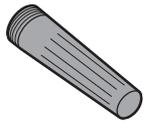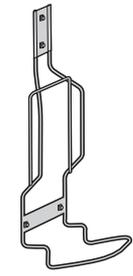240	340	440	640	
2	3	4	6	
1	1	1	1	
1	1	1	2	
1	1	1	1	
1	1	1	1	
1	1	1	1	
1	1	1	1	


**1** 4- 

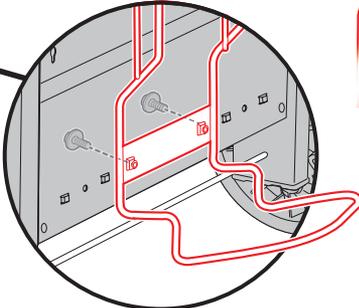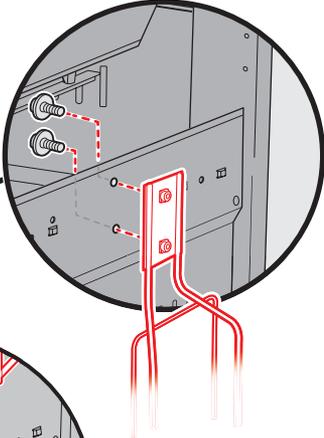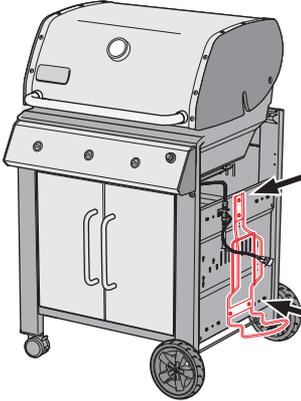


**2** 4-  2- 

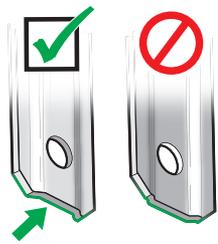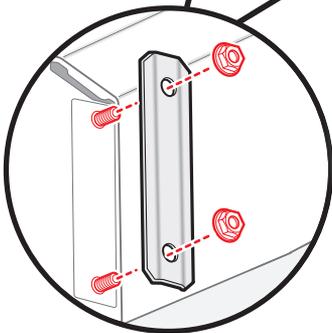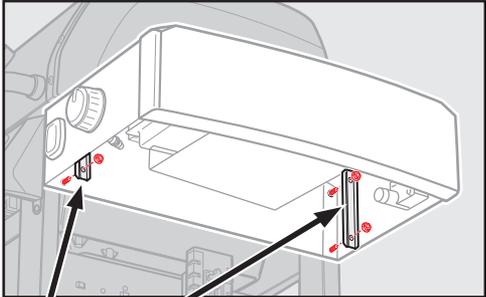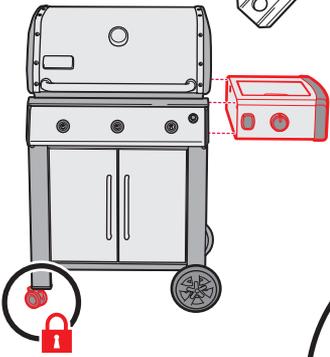

3

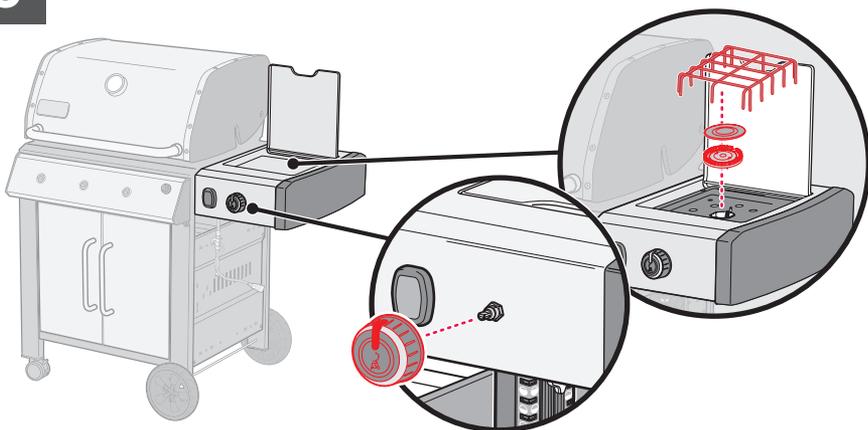


4

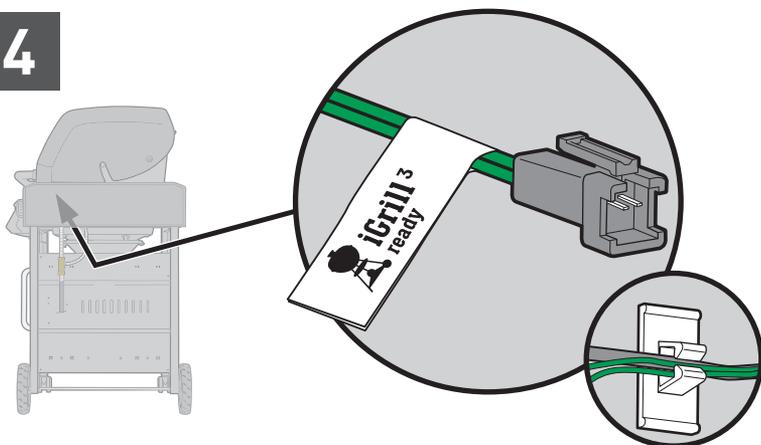


5


1-  + AA -

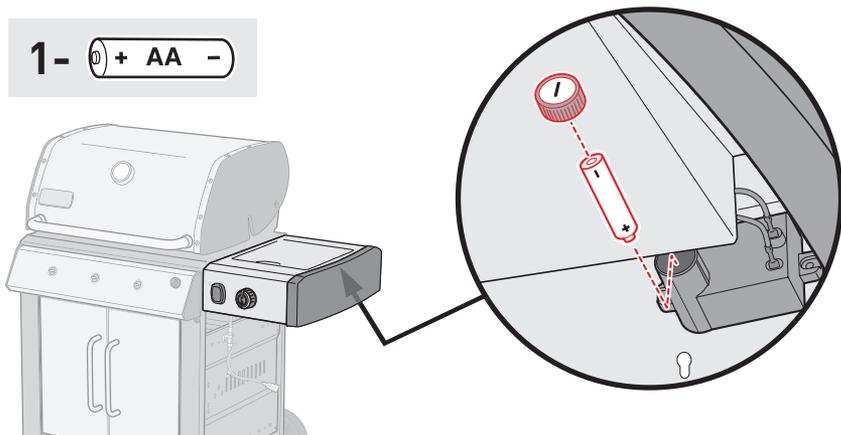

6

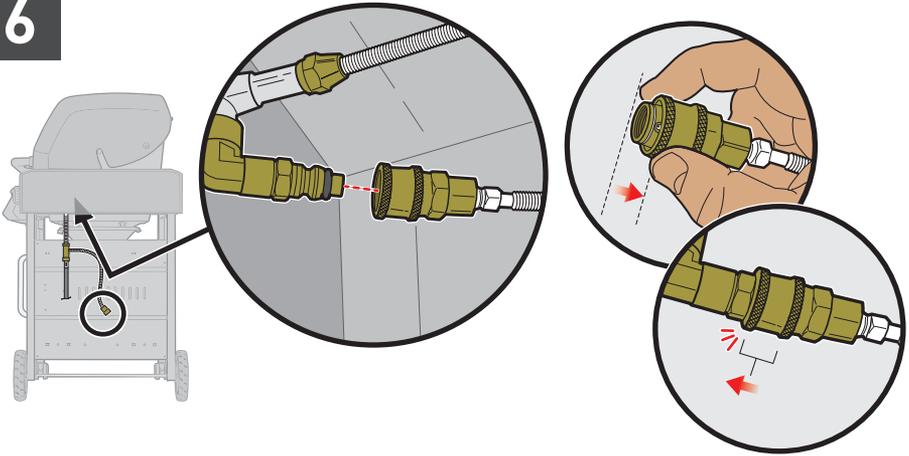

7

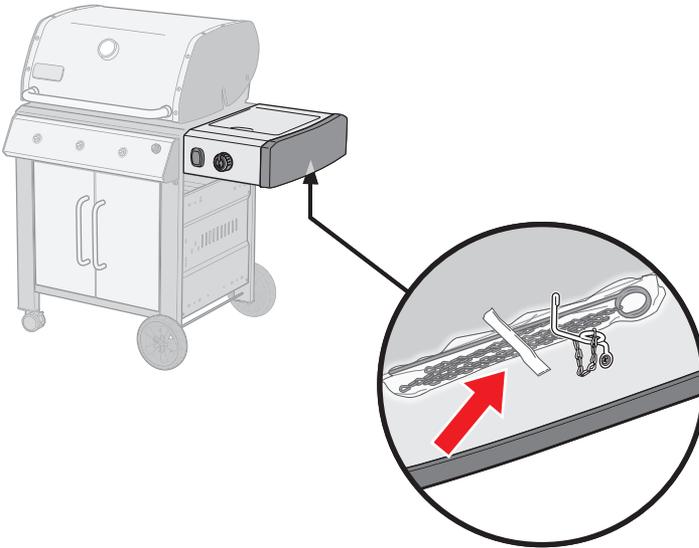

**⚠ DO NOT REMOVE BAG. See Owner's Manual for complete gas instructions.**

8A

4-







2-




MODELS ONLY:  440  640

• See next page for 240 and 340 models. →

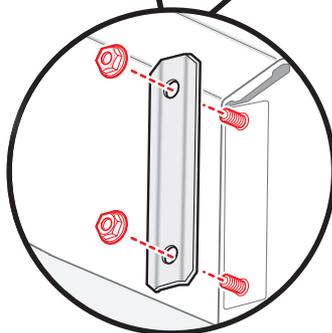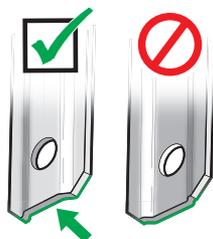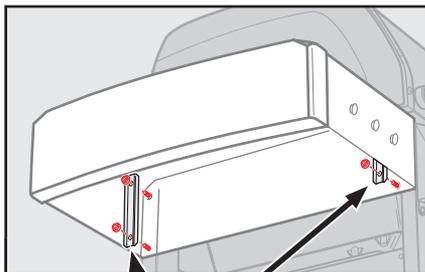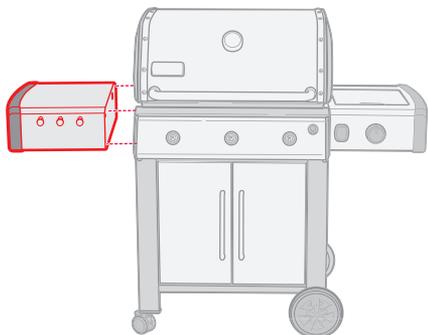

8B

 


MODELS ONLY:






240



340

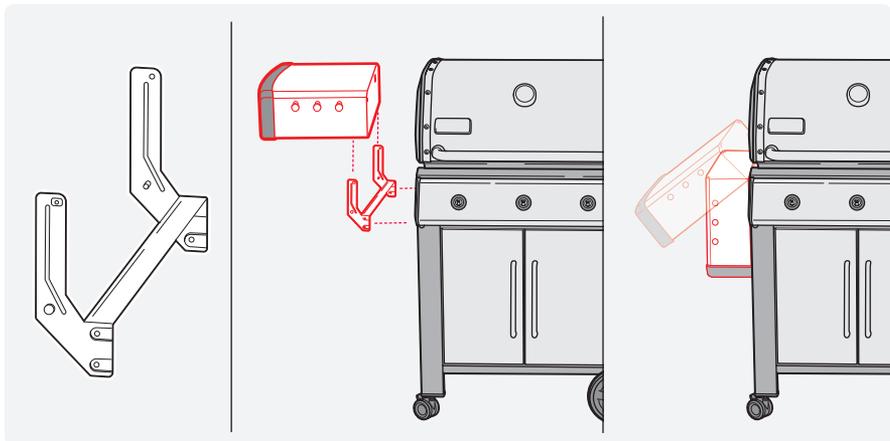



a.

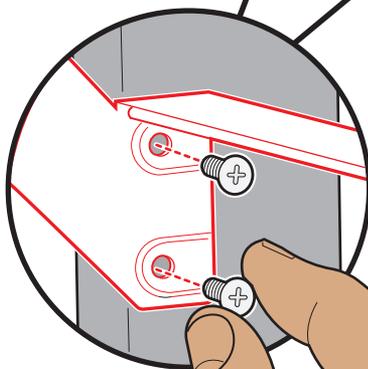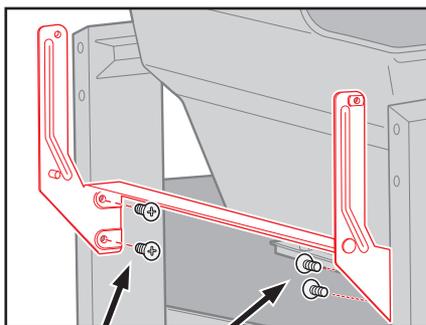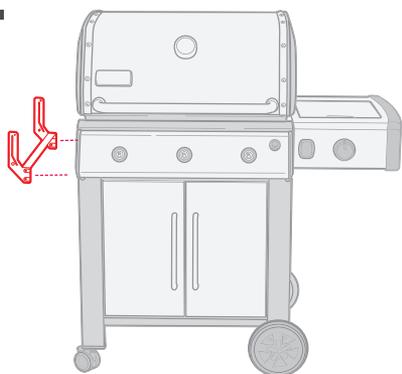



Finger tighten only.




**b.** *Flashlight recommended.*

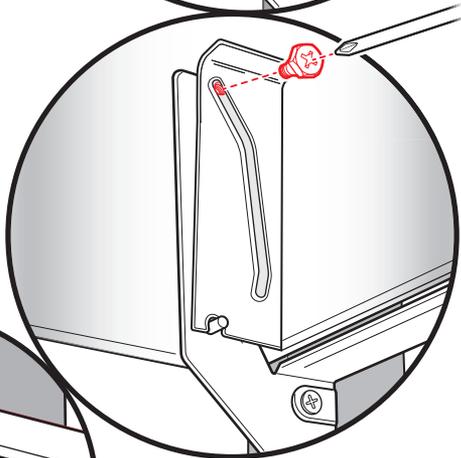
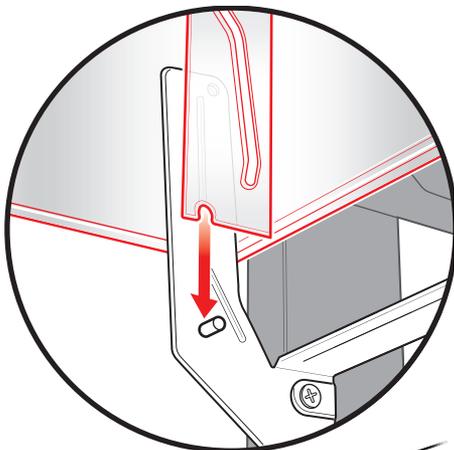


*Fully tighten.*

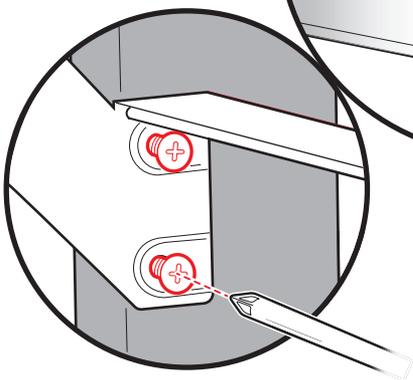 


**c.**

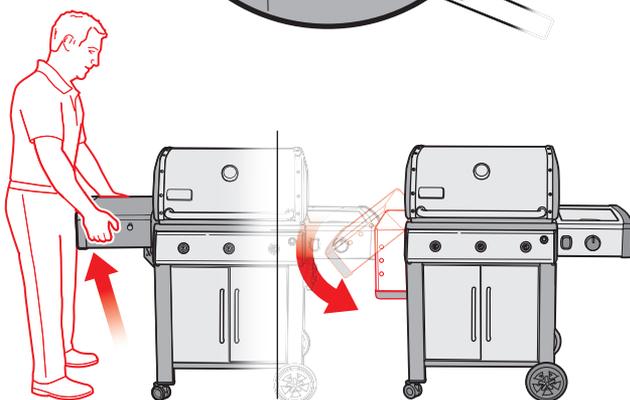


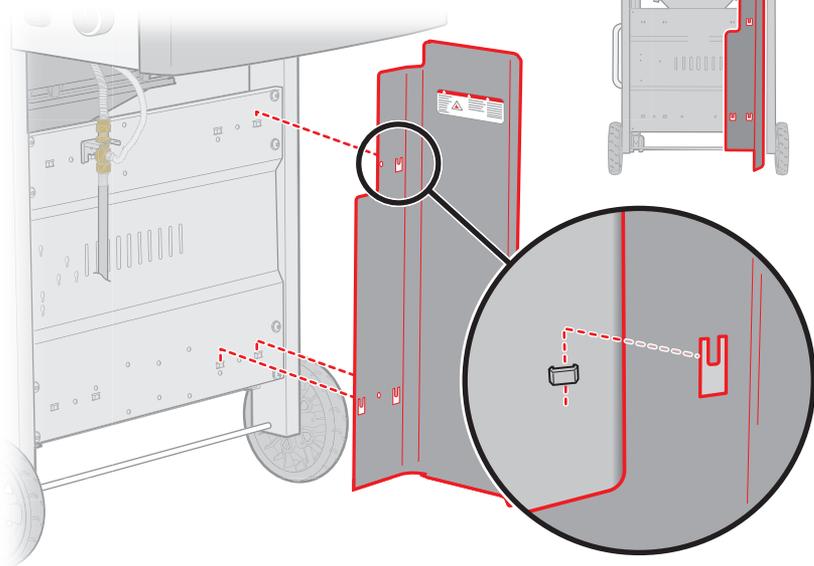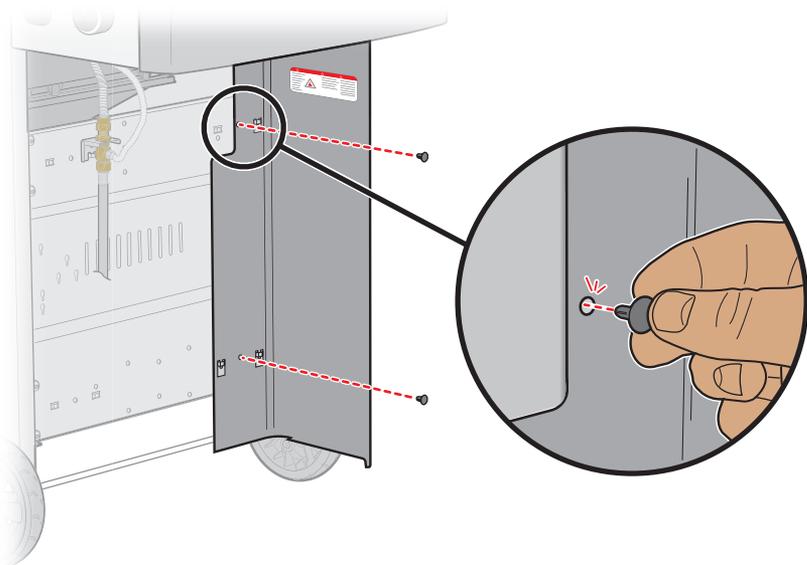**9****4-** **a.****b.**

**c.**



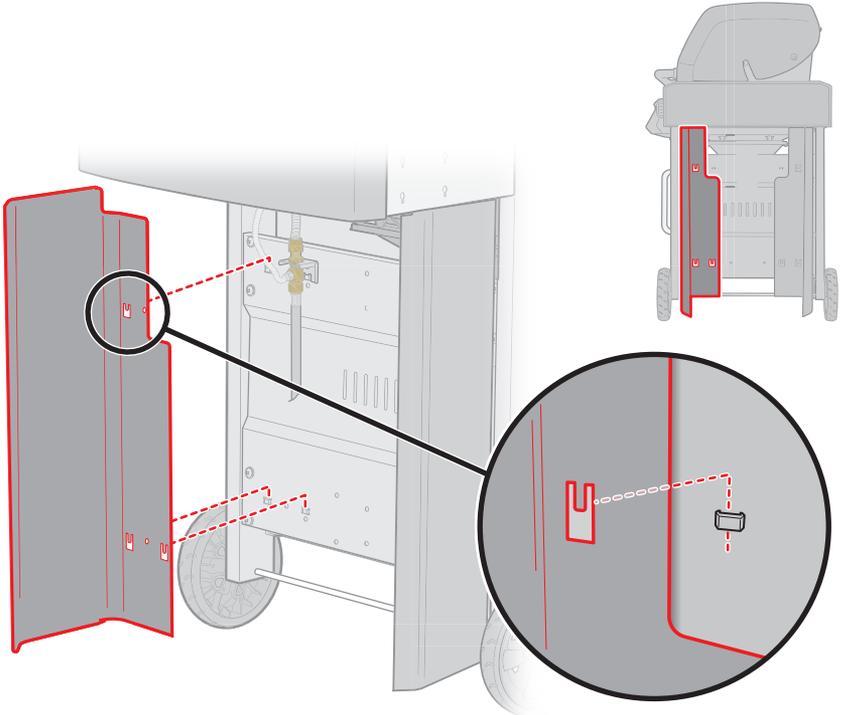


**d.**

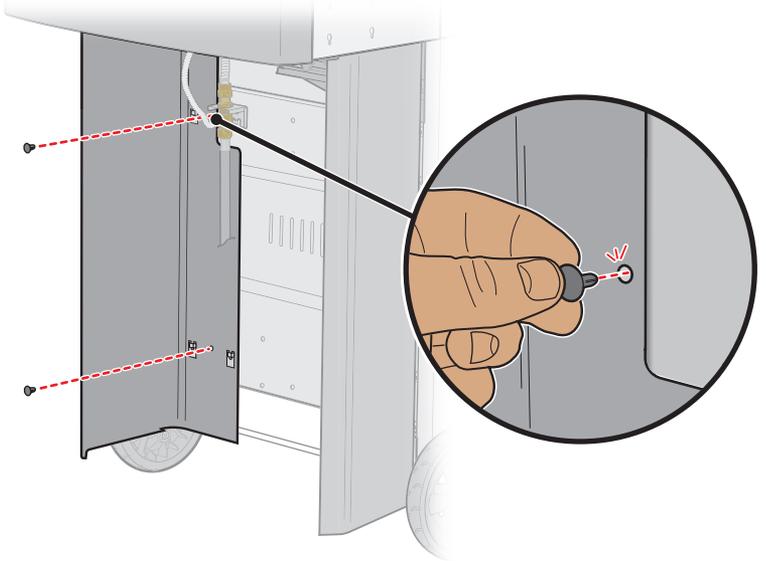



10

 3-  + D -

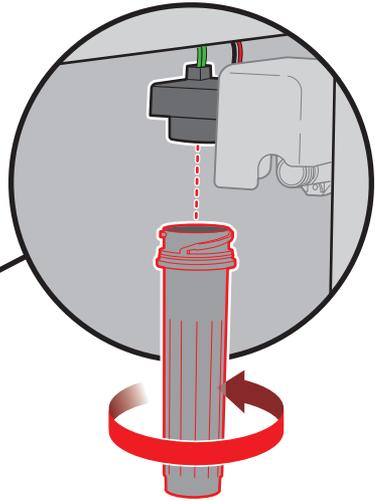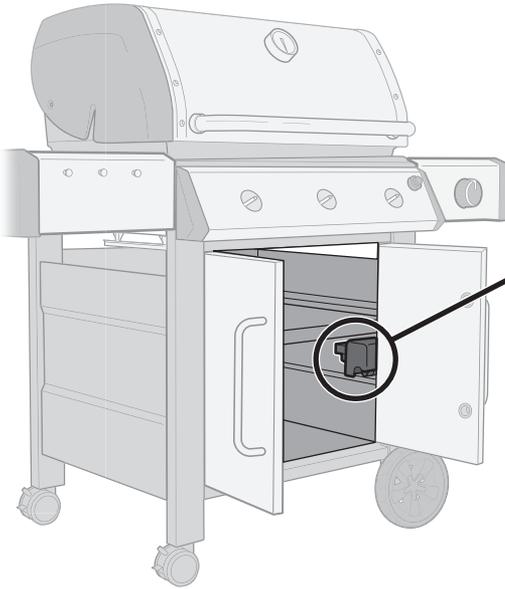


11

1-  + AA - 1- 

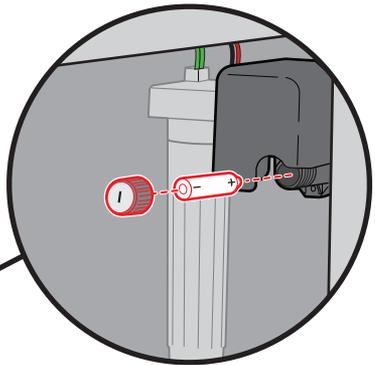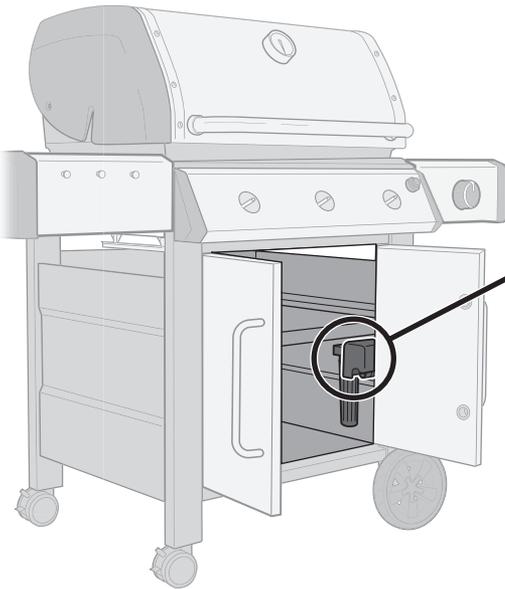


12

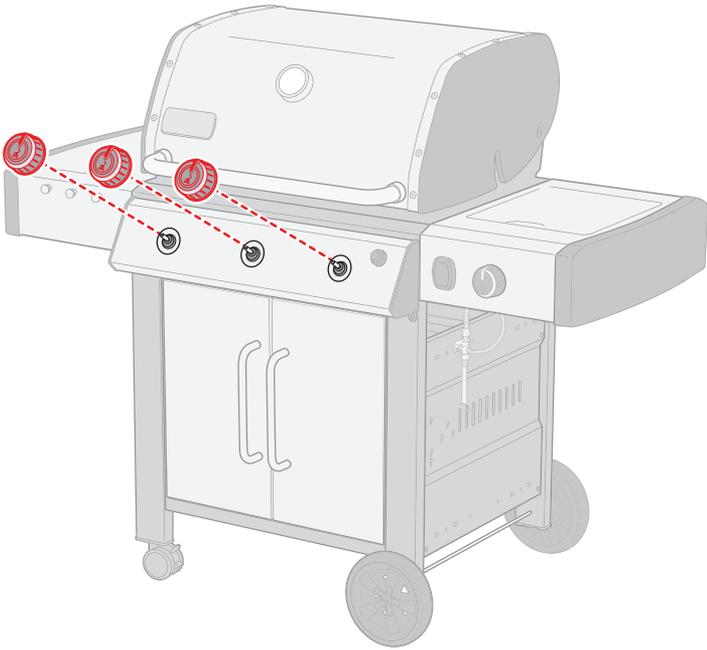


13




1-  1- 


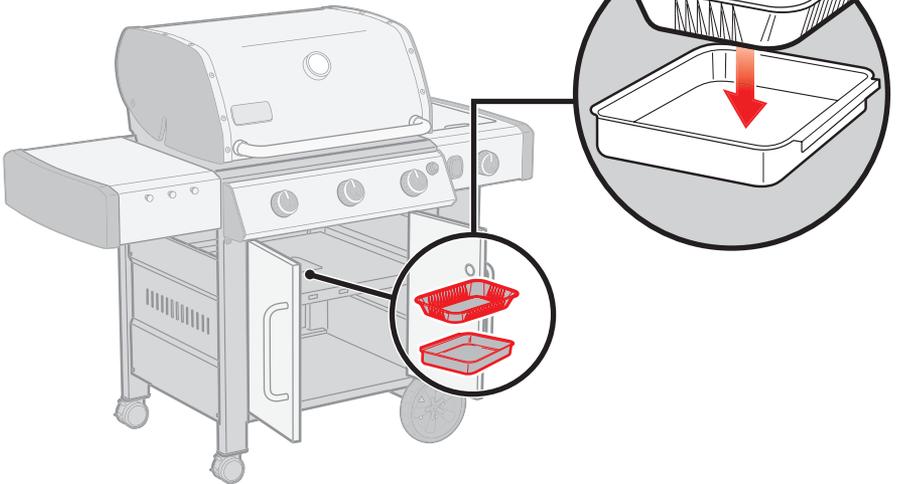


14

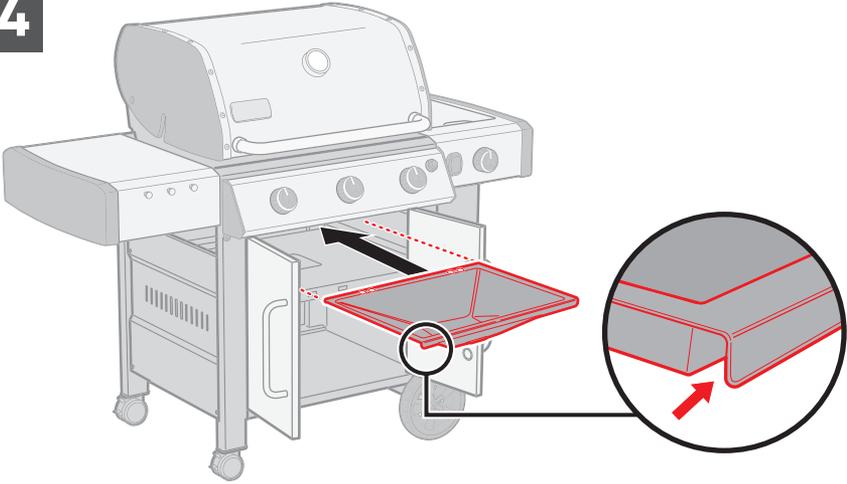


15

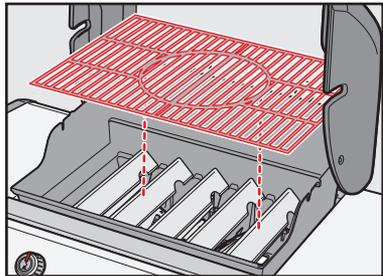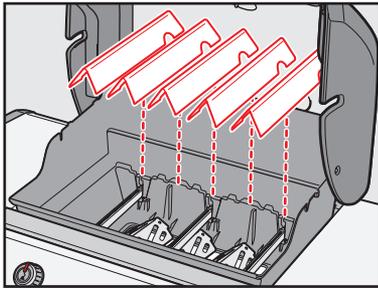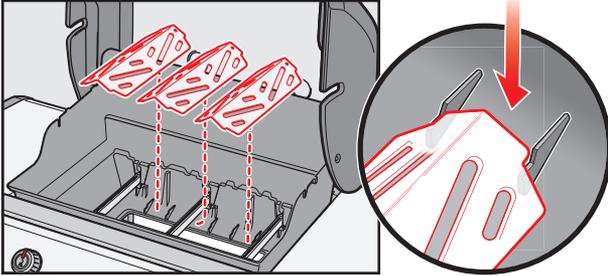


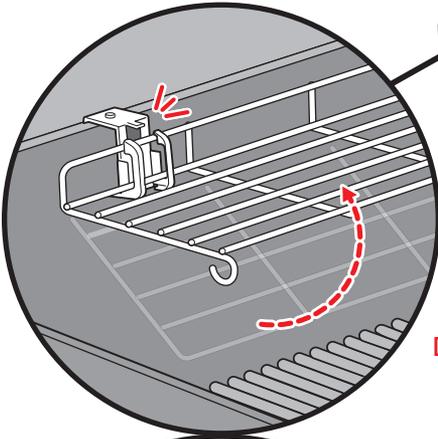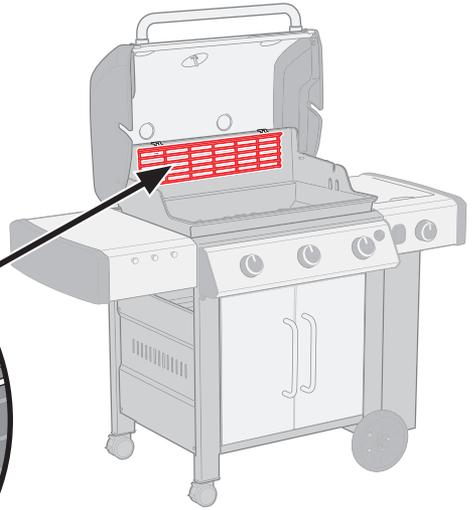

DOWN

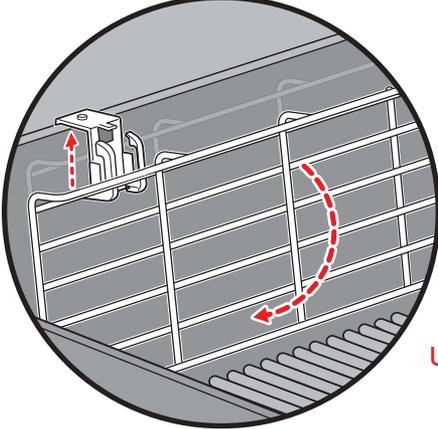

UP

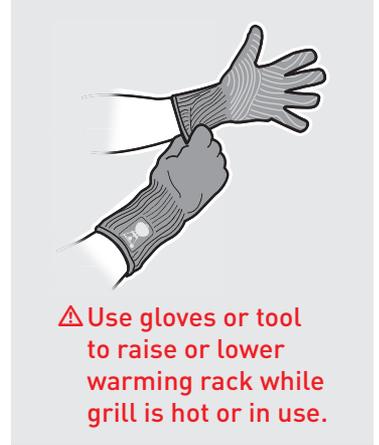







⚠ Use gloves or tool to raise or lower warming rack while grill is hot or in use.


3- (0) + AAA -

MODELS ONLY:   240  
   340  
    440

6- (0) + AAA -

MODELS ONLY:       640

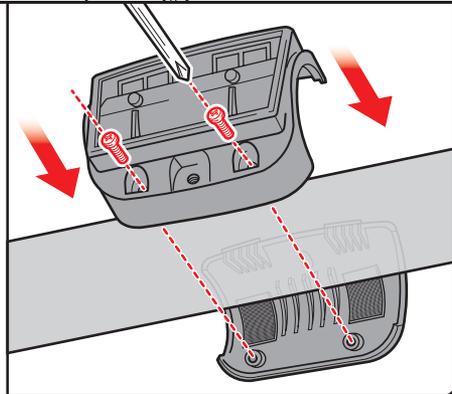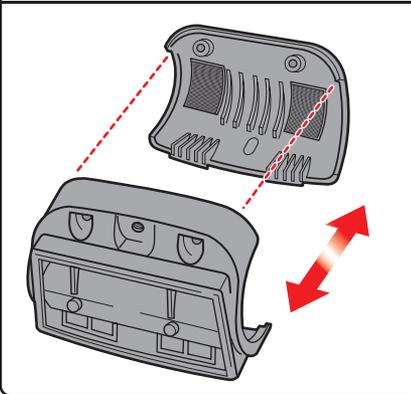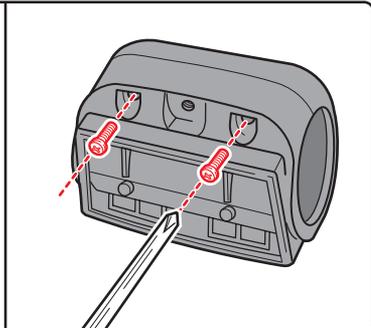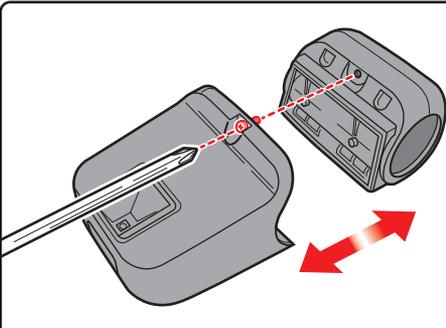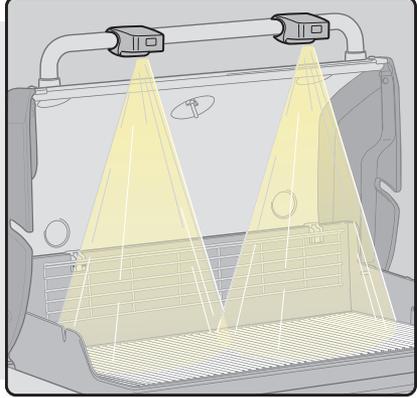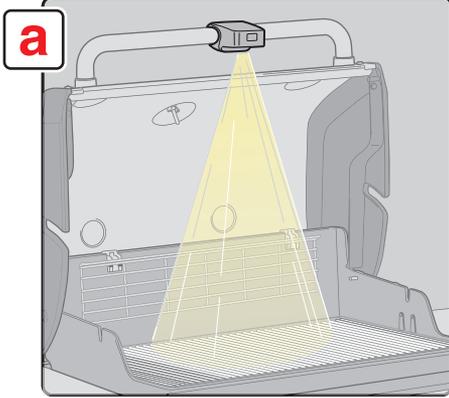

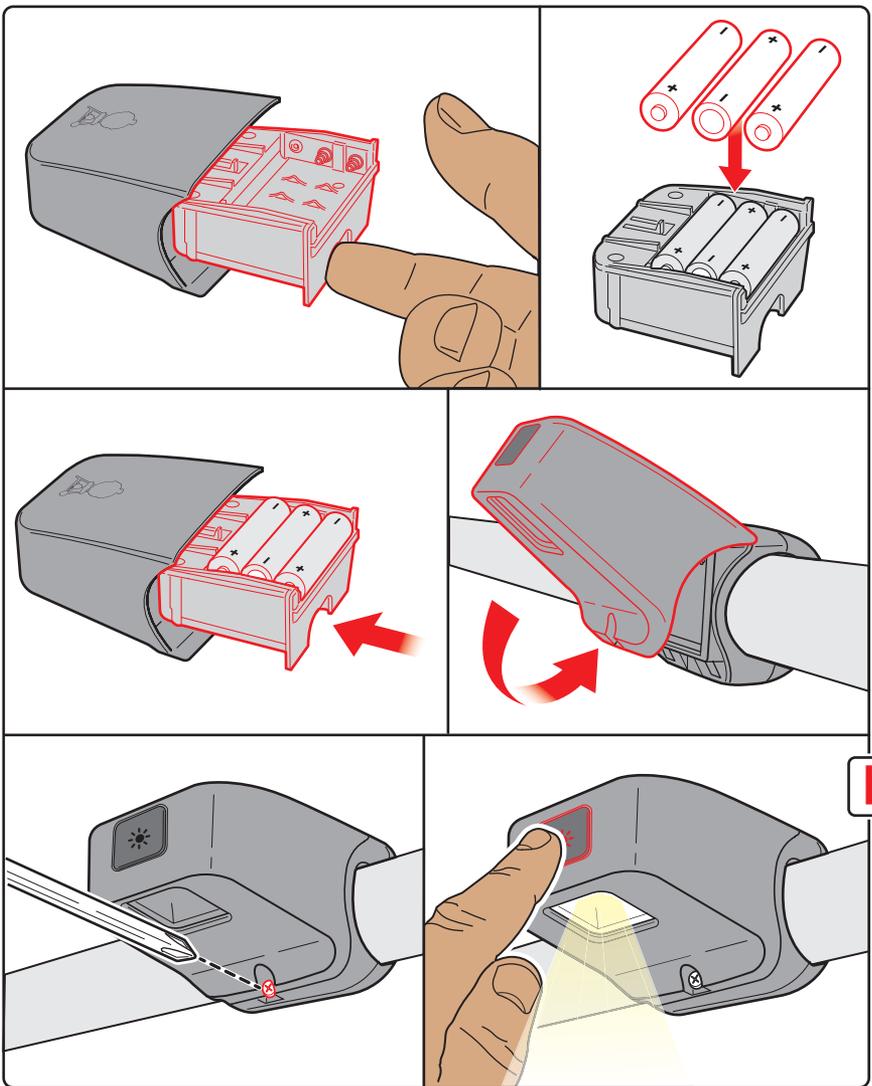

Before use, the grill light should be positioned as shown in illustration **(a)**. Press the AWAKE button to activate the grill light. The light has a 'tilt sensor' that will turn on the light if the grill lid is opened and turn off the light when the grill lid is closed. If the lid is left open or closed for more than 30 minutes, the grill light will deactivate. To turn the light back on, press the AWAKE button **(b)**.  
**NOTE: The light does not turn OFF by pressing the AWAKE button.**

Register Today.



PHONE



MOBILE



EMAIL



ONLINE

Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Android and Google Play are trademarks of Google Inc.